
FLEXSTYLE C*MO

Please Note: This form is to be used in conjunction with the Submittal Form.



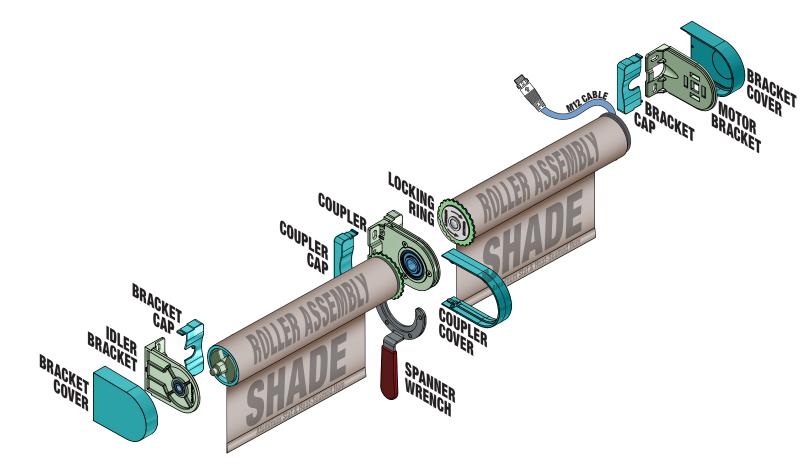

Draper, Inc. | 411 S. Pearl St. Spiceland, IN 47385 draperinc.com | 765.987.7999 | 800.238.7999 © 2022 All Rights Reserved | FORM: Coupled_FlexStyle_MO_Sub22


CONTRACTOR:	
SUPPLIER:	
DATE:	REVISED:



How to Measure for Motorized FlexStyle with Coupler

Please Note: Measurements are required for ALL Installations! Configurations will vary depending on site conditions.


- Find your installation's shade configuration below. (2, 3, 4, or 5-Panel)
- 2. Use the interactive boxes to assist in measuring.
- 3. Shade Panel Width(s): Measure from the CENTER of a Coupler Bracket to the CENTER of the next Coupler Bracket.
- 4. Motor End and Idler End Shade Panel Widths: Measure from the CENTER of a Coupler Bracket to the OUTSIDE EDGE of Motor End or Idler End Bracket Cover.

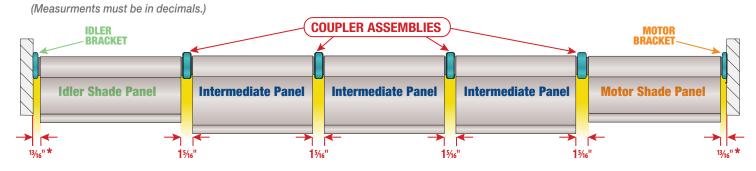

* This dimension may be larger, depending on motor selection. Contact Draper® for motor verification.

PLEASE NOTE: Measurements in fractions MUST be converted to decimals. **2 Shade Panels 3 Shade Panels ELEVATION VIEW ELEVATION VIEW** COUPLER COUPLER COUPLER PANEL 2 PANEL 1 PANEL 2 PANEL 1 PANEL 3 Idler Idler Intermediate Motor End Motor End **Shade Panel Shade Panel Shade Panel Shade Panel Shade Panel** TOP VIEW TOP VIEW Panel 1 Width: Panel 2 Width: Panel 1 Width: Panel 2 Width: Panel 3 Width PANEL 1 PANEL 2 PANEL 1 PANEL 2 PANEL 3 Bracket Light Gap Width: Light Gap **Light Gap** Light Gap Light Gap Width: 1.313" Width: 1.313" Width 1.313


0.8125"

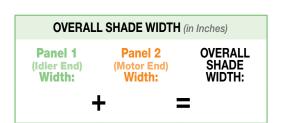


0.8125" *




4 Shade Panels

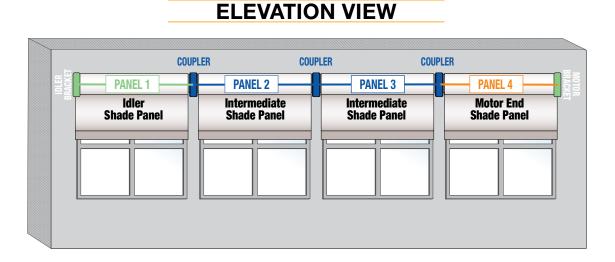

TOP VIEW

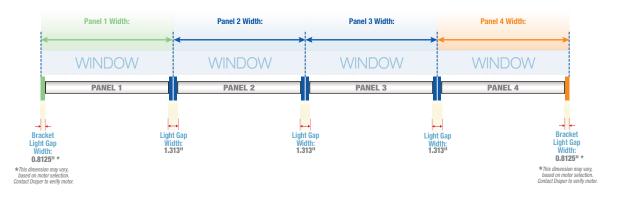


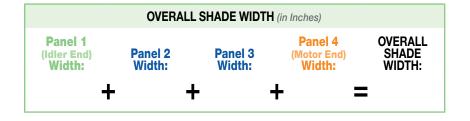


page 3 of 4

5 Shade Panels

ELEVATION VIEW

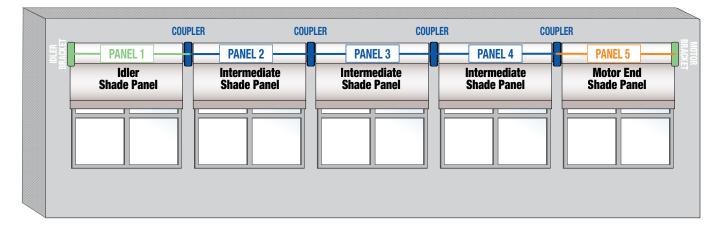

TOP VIEW

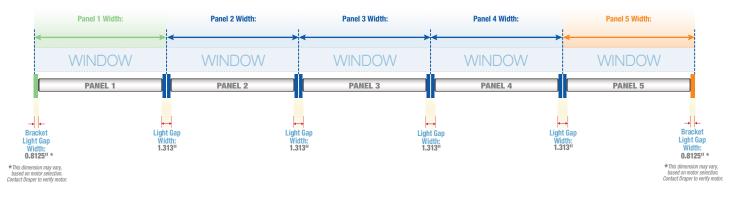

OVERALL SHADE WIDTH (in Inches)										
Panel 1 (Idler End) Width:		Panel 2 Width:		Panel 3 Width:		Panel 4 Width:		Panel 5 (Motor End) Width:		OVERALL SHADE WIDTH:
	+		+		+		+		=	